


Adjustable Base Customer Service

Phone 1800 763 498
NZ Phone and Fax: 0800 443 292
Fax 1800 767 493
Email info@ergomotion.us
Web www.tempur.com

Tempur Mattress Customer Service

Phone 1300 306 062
NZ: 0800 483 6787
Email info@tempur.com.au
Web www.tempur.com

©2012 Ergomotion Inc
V_001 11/2012

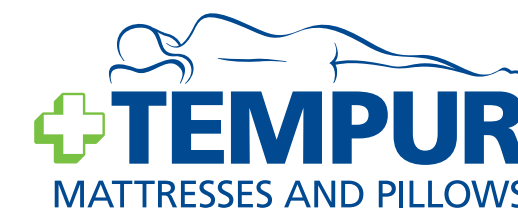

Serial Number:

+

+

+

+

ZERO-G Platinum Series Owner's Manual



table of contents

Safety Precautions and Usage Statements	1-2
Parts List	3
Base Overview	4-5
Installation Guide	6-7
Remote Control	8-9
Headboard Bracket Installation Guide	10-11
Emergency Power Down Box	12
Pair Remote	13
Setting Up Two Bases	14-15
Quick Reference Guide	16
Troubleshooting	17

safety precautions and usage statements

Attention: Important Safety Disclaimers

Read all instructions before using your adjustable base. Save these instructions.

To reduce the risk of shock, burns, fire or injury:

Always unplug the base from the electrical outlet before servicing any part of the base. To reduce risk of electric shock, unplug the base before cleaning. To safely disconnect, ensure the base is in a flat position with all motors off, and unplug from power source. Keep the power cord away from heated surfaces. Never operate the base when the air openings are blocked. Keep air openings free of lint, hair and the like. Do not drop or insert any object into any opening.

Discontinue use of the bed base and contact a qualified service center if: it has a damaged cord or plug, if it is not working properly, or it has been dropped into water.

Only use this bed base for its intended use as described in this manual. Do not use accessories/attachments that are not recommended by the manufacturer.

Close supervision is required when the bed base is used by or near children, convalescents or disabled persons.

Outlet Safety:

For optimal safety and operation, plug bed base into a surge protector (not included).

The bed base should only be plugged directly into a wall outlet or surge protector (strongly recommended). Improper connection of the equipment can result in the risk of electrical shock, electrical fire or faulty operation of this bed base. Unauthorized modification or failure to use a wall outlet or surge protector could void the electrical portion of your warranty.

Warranty Warning:

Do not open or tamper with control box, motors, or remote (with the exception of battery compartments). The warranty will be void if the internal workings of these components are tampered with. For complete warranty information visit www.tempur.com or refer to the warranty card included with the base. Do not sit on the head or foot sections while in the raised position. Do not attempt to move or service the base while it is occupied. Exceeding the recommended weight restrictions could damage your bed base and void your warranty.

In-Home Use and Hospital Disclaimer:

Ergomotion adjustable bed bases are designed solely for in-home use. This base was not designed as a hospital bed and is not designed to meet hospital standards. Do not use this base with TENT TYPE oxygen therapy equipment or near explosive gases.

Pacemaker Notice:

It is possible that some pacemakers may falsely interpret the optional massage feature vibrations as movement/exercise. This is a common occurrence with any product that creates a vibrating movement and may not affect the pacemaker. Please consult your physician before using the massage feature.

Pets and Small Children:

Immediately dispose of all packing materials as it may pose a smothering risk to small children and pets. To avoid injury, it is not advised to allow children and small pets to play on or under the bed. Children should not operate the bed base without adult supervision.

safety precautions and usage statements

Safety Features:

Free release head and foot motors are designed to lower the mattress by retracting only with gravity, never pulling downwards, which minimises pinch points.

Product Ratings:

The lift motors are not designed to operate continuously for more than [2] minutes in an [18] minute time period or approximately 10% duty cycle. Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.

Weight Restrictions:

The recommended weight restrictions for the Ergomotion adjustable base are as follows and include the weight of the mattress: Single Long and NZ King Split: 182 kg. Queen: 227 kg.

The bed base will support the recommended weight limits if distributed evenly across the base. This product is not designed to support or lift this amount in the head or foot sections alone. Consumers should not enter or exit the bed with any portion in the raised position. Do not sit on the head or foot sections while in the raised position. Do not attempt to move or service the base while it is occupied. Exceeding the recommended weight restrictions could damage your bed base and void your warranty.

Acoustics:

The massage function will emit a noticeable tone during operation. As the massage intensity level is increased, the tone will intensify. The volume of this tone is directly related to the location environment. For example, when demonstrated in a show room, the surrounding

environmental noise will cover some of the massage noise. However, when installed in a home setting with wooden floors, carpeted or not, the massage volume will be more noticeable. In normal base operation, the wheels which allow the bed to maintain its distance from the wall, will make contact with the steel platform supports of the base creating a contact noise. When entering, exiting or shifting weight on the base, this contact noise may be audible as the wheels make contact. This is normal.

SAVE THESE INSTRUCTIONS.

parts list






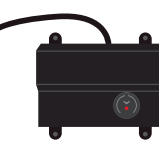








Before discarding the packing materials- ensure all the parts are accounted for.

All electronics and components that need to be installed are located in boxes under the base or attached to the frame.

- A) Wireless Remote Control and (3) AAA batteries
- B) Mattress Retainer Bar (1)*
- C) Legs (4)
- D) Power Cord (1)
- E) Power Supply (1)
- F) Power Down Box (1)*
- G) Connecting Strap* ‡
- H) SmartSync™ Cord (1) ‡

Headboard Bracket Components (optional accessory, not included):


- I) Headboard Bracket (2)
- J) T-Bracket (2)
- K) Spacers (2)
- L) Long Bolts (8)
- M) Short Bolts (10)
- N) Nuts (18)

A) 	B)* 	C) 
D) 	E) 	F)* 
G)* ‡ 	H) ‡ 	
HEADBOARD BRACKET COMPONENTS (OPTIONAL)		
I) 	J) 	K) 
L) 	M) 	N) 

* These items are attached to the base for shipping purposes. Carefully remove from base and set aside.

‡ Only included in Single Long and NZ Split King bases.


base overview

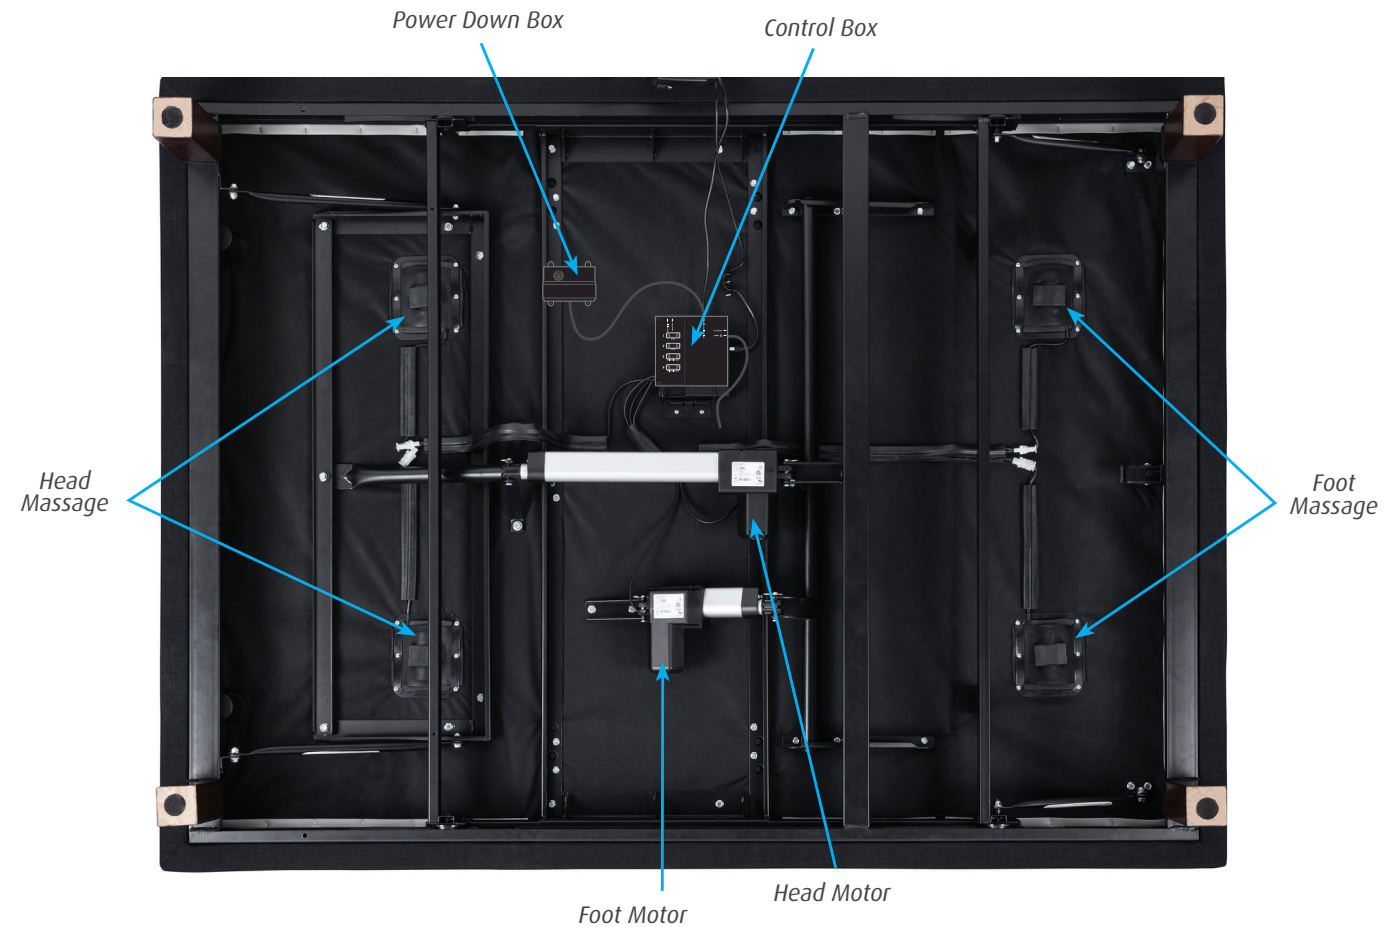

base overview

Zero-G Position:

Measurements include a 229mm wooden leg.
 Angles will vary up to 10 degrees with the addition of weight.

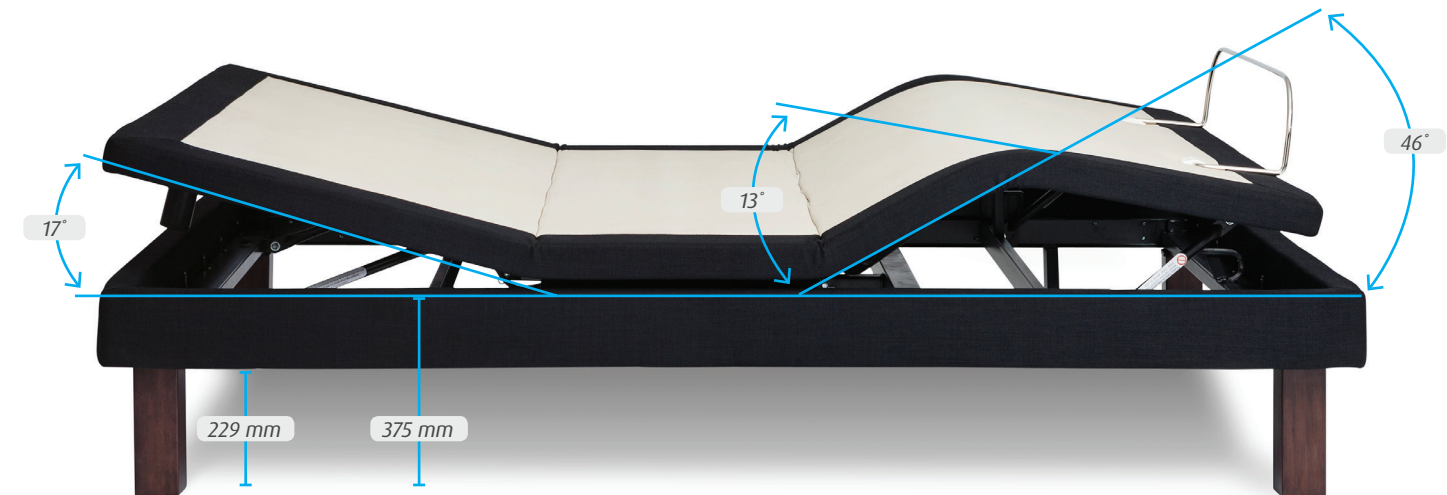

Dimensions:

Measurements listed are of the base without legs.

SIZE	DIMENSIONS LxW (mm)
Single Long	2030 x 910
Queen	2030 x 1520
NZ Split King*	2030 x 825

*Available in NZ Only.

installation guide

Always use two people when setting up the base.

STEP 1

Place the bed base box in a desired location with the bottom of the box facing up.

Remove the binding straps and packing materials, making sure not to puncture the box with any sharp objects.



STEP 2

Remove the bed base from the box keeping the bottom of the base facing upwards.

STEP 3

To install headboard brackets: See detailed installation instructions on page 10-11.

To install the legs, thread the washer over the bolt of the leg with the recessed side facing the leg, and tighten by hand. **Do not over tighten.**




STEP 4

To sync two bases with the SmartSync™ cord - see page 14-15.

Uncoil the Power Down Box from the frame and install (2) 9 Volt batteries- not included.

Place box on the ground. Ensure that it is easily accessible when the base is turned to its upright position.

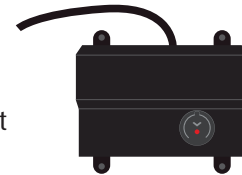

installation guide

STEP 5

Uncoil input cord (connected to control box's power port) and plug into Power Supply.



STEP 6

Uncoil the Power Cord and connect to the Power Supply. Place Power Supply on the ground and extend from the base. Ensure that the Power Supply and all attached cords are directed toward the desired surge protector.



STEP 7

Carefully flip the base over on to its legs. **Important:** Two people are required to move the bed base. Do not drag across the floor. Do not rest frame on its side, excessive pressure may damage the legs.

STEP 8

Plug the base into a power source. **A surge protector is strongly recommended.**



STEP 9

Ensure batteries are correctly installed in the back of the remote.

Quickly test functions to verify proper setup before placing mattress on base. Press FLAT to return the base to a flat position.

STEP 10

Slide the left side of the mattress retainer bar into the bracket. Pull the retainer bar to the opposite bracket and secure the right side.



Basic setup is now complete! See page 8-9 for remote control operating instructions.




For customer support call: 1800 763 498 | NZ: 0800 443 292


For customer support call: 1800 763 498 | NZ: 0800 443 292


remote control

REMOTE OVERVIEW

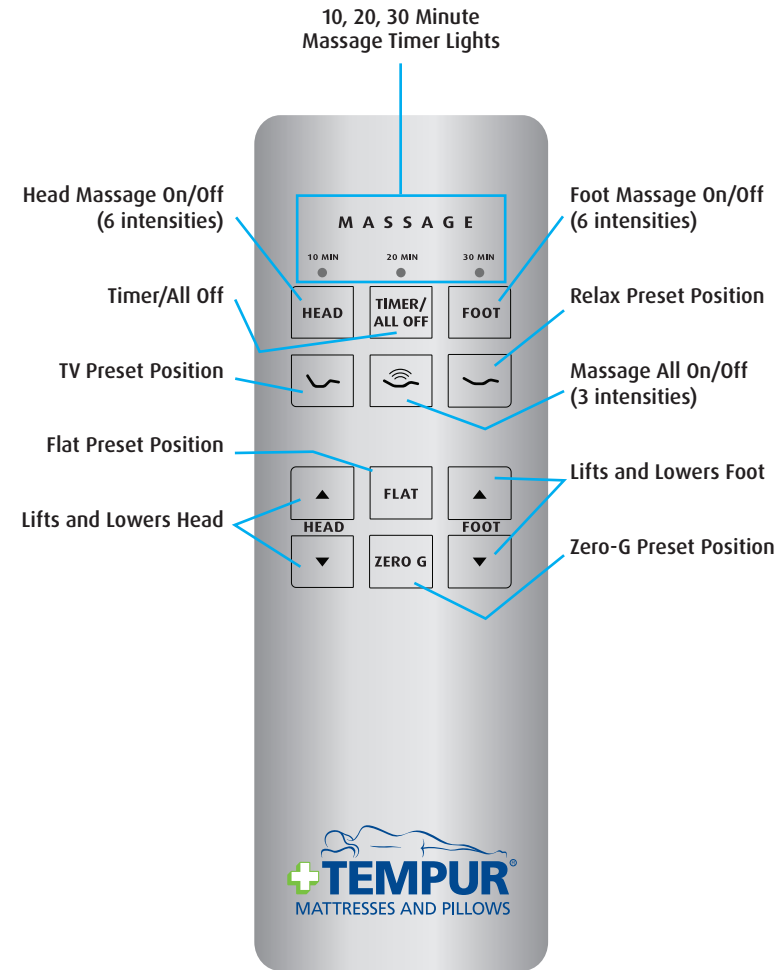

MESSAGE FEATURE



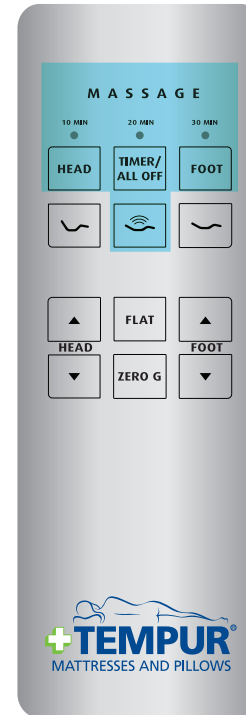

-  The **MESSAGE** button activates head and foot massage. Press 3 times to cycle through different intensities. Press a fourth time to shut off massage.
- HEAD** The **HEAD** button will turn on the head massage. Cycle through 6 massage intensities. Press a 7th time to turn off.
- FOOT** The **FOOT** button will turn on the foot massage. Cycle through 6 massage intensities. Press a 7th time to turn off.
- TIMER/ALL OFF** The **TIMER/ALL OFF** button selects a 10, 20 or 30 minute massage interval. Pressing a fourth time will turn off massage.
- 10 MIN** The light on the top of the remote indicates a 10, 20 or 30 minute timer setting.* Press a fourth time to turn all massage off.




* Message will automatically shut off after 10 minutes if the massage timer isn't set.



remote control


ADJUST

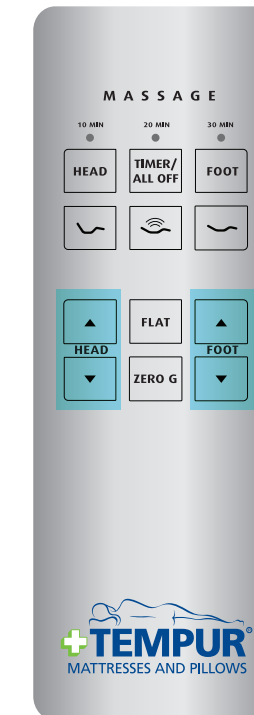-  **HEAD** The **HEAD** ▲ ▼ arrows lift and lower the head section of the base.
- 
-  **FOOT** The **FOOT** ▲ ▼ arrows lift and lower the foot section of the base.
- 



ONE TOUCH BUTTONS

- ZERO G** One touch **ZERO-G** preset position. Zero-G adjusts your legs to a higher level than your heart helping to relieve pressure off the lower back and promote circulation.
- FLAT** One touch **FLAT** preset position.
-  One touch **TV** preset position.
-  One touch **Relax** preset position.

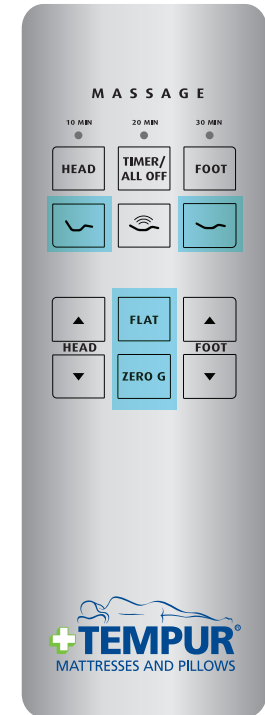

headboard bracket installation guide (optional)

Headboard brackets are an optional accessory and are not included.
A 9/16" & 1/2" socket and crescent wrench are necessary to complete installation.

STEP 1

- Align the hole in the bracket to the brass sleeve into which the leg threads. Hold the bracket in place and screw the leg into the base until it is snug. DO NOT OVERTIGHTEN. Too much force may cause the leg to spin freely.
- Align the tab with the hole in the frame (located towards the foot of the base) and use a short bolt and nut to secure the bracket. Make sure the bolt is tight.




headboard bracket installation guide (optional)

STEP 2

Attach the plastic spacer and T-Bracket.

- Measure the distance between the mounting holes on the headboard and install the spacer and attachment plate to accommodate the headboard.
- To install the plastic spacer and attachment plate, you will need (2) long bolts and (2) nuts. Place the spacer and attachment plate in the desired location and slip the bolts through the holes with the head of the bolt facing outward. Position the bolts diagonally on the spacer. Use the 9/16" socket and wrench to tighten the bolts.

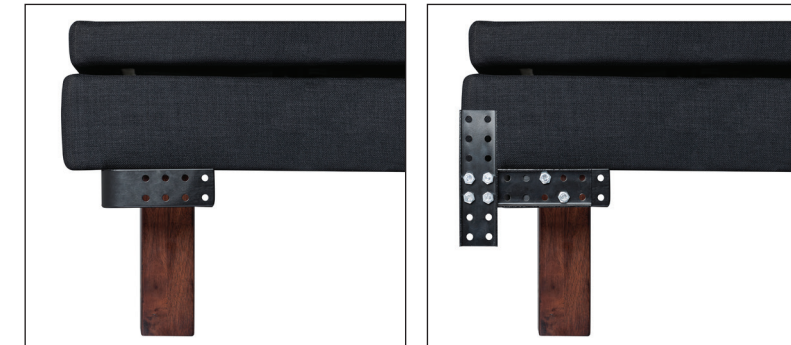

STEP 3

You may now connect your headboard to the attachment plates using the remaining short bolts and nuts to secure it to the brackets. The heads of the bolts will face outward. Use a 9/16" socket and 1/2" wrench to tighten the bolts.

emergency power down box


In the event that the base is stuck in an articulated position during a power outage- the Power Down Box will return the base to a flat position.

(2) 9 Volt batteries are required to operate the power down feature and are NOT included.

STEP 1

Locate the Power Down Box under the base.

During the first few minutes of the power outage, the button on the box will blink red so that it is easy to locate.

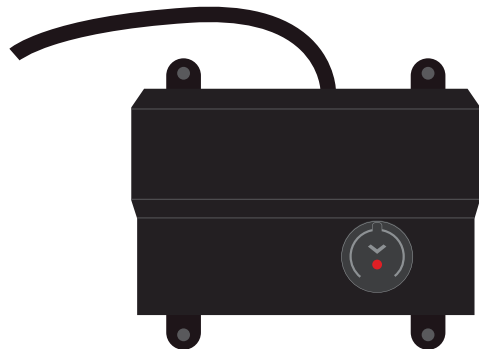

STEP 2

Press and hold the button until the base is flat.

Note: The red light will turn off after several minutes, however the button can be pressed at any time during the loss of power to bring the base flat.

For emergency use only.

The Power Down Box can only be used to bring the base to a flat position. It will not bring the base to a flat position when the base is connected to a working power source.

pair remote

The original remote that comes in the box is already paired to the bed base.
No further action is required.

In the event that the remote is not paired with the base, follow the steps below.


STEP 1

Remove back cover from remote control. Remove and replace batteries.




STEP 3

Press and hold button on the back of the remote. The light will begin to flash then become a continuous solid light.

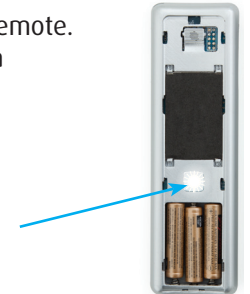

STEP 2

Double click the button on the Power Down Box (this will not cause the base to move). The light will illuminate.

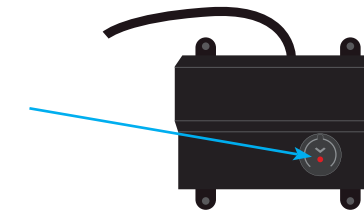

STEP 4

Both lights on the Power Down Box and the Remote will be continuous, then simultaneously turn off. Replace back cover of the remote.



The remote is now paired with the base.

If the Power Down Box is not available- Press Reset button on control box. Pairing LED light on control box will begin to blink. Press and hold button on the back of the remote, the button will begin to blink. Both lights will become continuous and then simultaneously turn off.

setting up two bases

If any split setup is being installed, plastic connecting straps are provided (one per base) to secure the bases together. Use both straps to secure the head and foot portions together.

STEP 1

With the bases in their desired location, slightly loosen both legs to allow the strap to fit on the leg bolt, between the leg washer and frame.



STEP 2

Slide side (a) of the connecting strap onto leg bolt. Swing the strap and connect side (b) to the leg bolt. Secure the strap by shifting to the left.



STEP 3

Re-tighten legs. Do not over tighten. Use the remaining strap and repeat on other end of the base.

setting up two bases

If simultaneous operation of two bases is desired, use the SmartSync™ Cord to connect the electronics of both bases together.

STEP 1

Unplug base from power source.

STEP 2

Detach the power-down box from both control boxes. Set aside.

STEP 3

Plug each end of the sync cord into the serial port where the power-down box was previously plugged in.


STEP 4

Re-attach power down boxes to the sync cord splitter (see image).


STEP 5

Plug base back into the power source.

Both remotes will now operate both bases simultaneously.

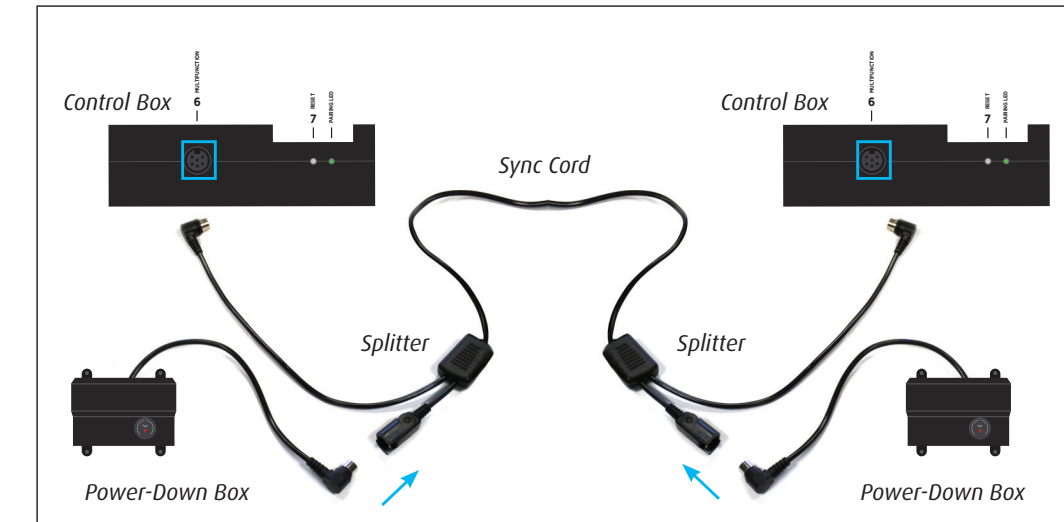

Not to scale. For illustration purposes only. Read all instructions before beginning installation.

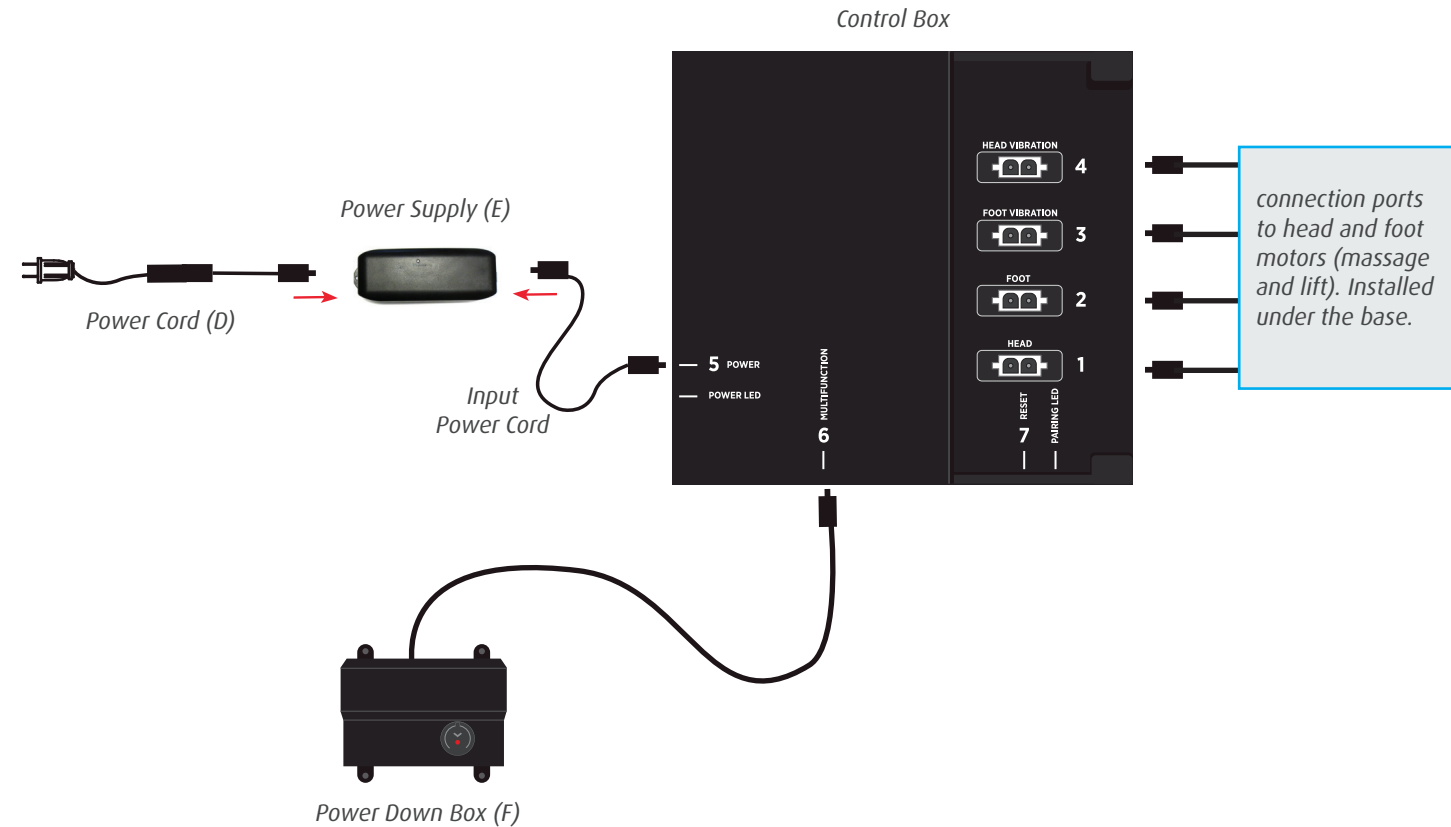

If one or more functions on the bed base have stopped operating:

- Check under the bed base to verify that the wired connections are secure and that there are no cords or bedding obstructing the movement of the base.
- Check to ensure the green LED light is illuminated on the control box. If there is no light, verify that the input and power cords are properly connected.
- Unplug the base for 1 hour to reset the electronic components.
- Plug bed base into a different electrical outlet, or test current outlet with another working appliance (a grounded, electrical surge protector is recommended).

If issue is not resolved by following the instructions above, locate serial number on warranty card or back of remote and call

Adjustable Base Customer Service: 1800 763 498 | NZ: 0800 443 292

Tempur Mattress Customer Service: 1300 306 062 | NZ: 0800 483 6787

www.tempur.com